SL8.0 bike RVSL-10801

目次


ユーザーマニュアル(組立方法・取扱説明書)	1
パーツリスト(部品一覧表)	8
コンソールマニュアル(操作画面説明書)	12
シリアル表示位置	14






SL**8.0** Bike USER MANUAL


PARTS:

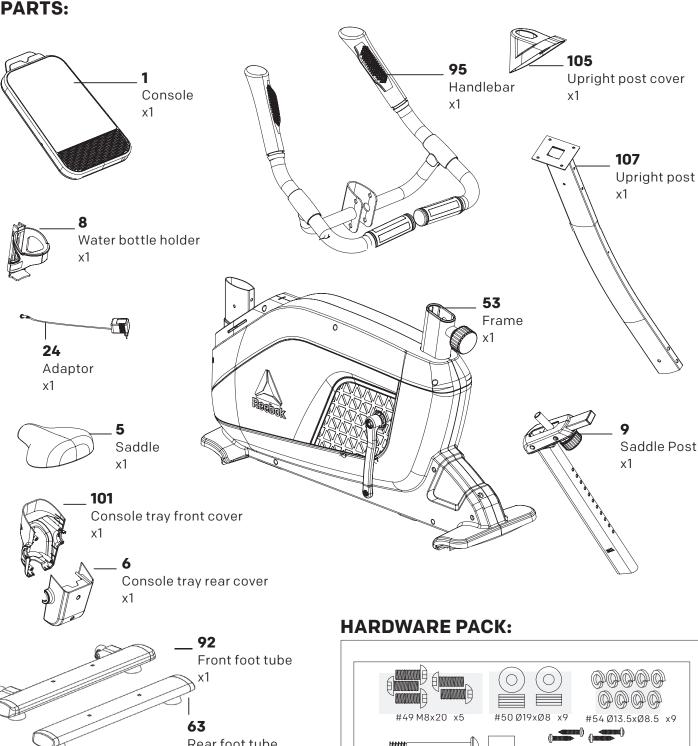


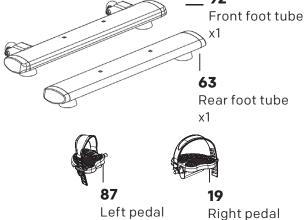



#61 Socket Wrench with screwdriver x1 #66 M8x60 x4 #60 Wrench with screwdriver x1 #62 6x35x150mm Allen Key x1



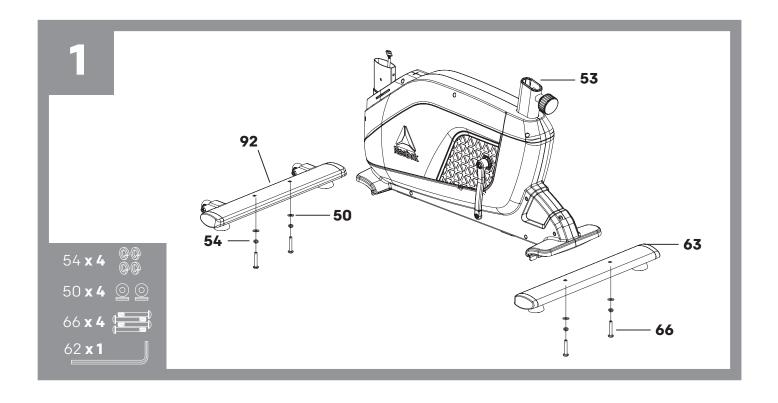


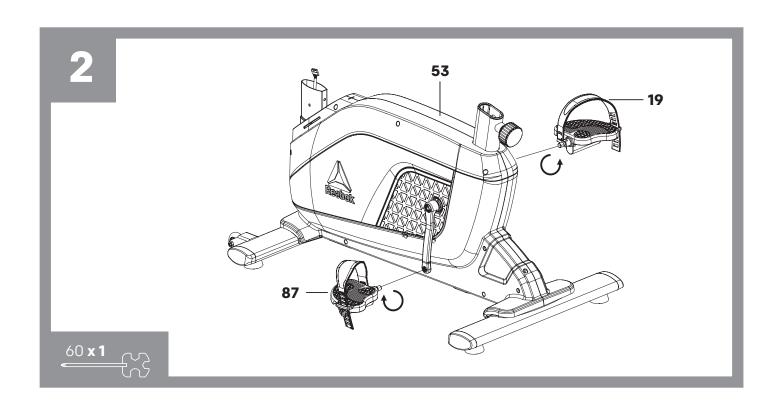


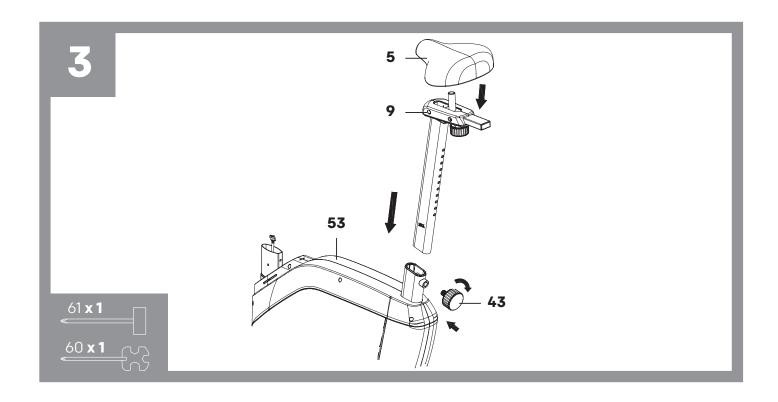


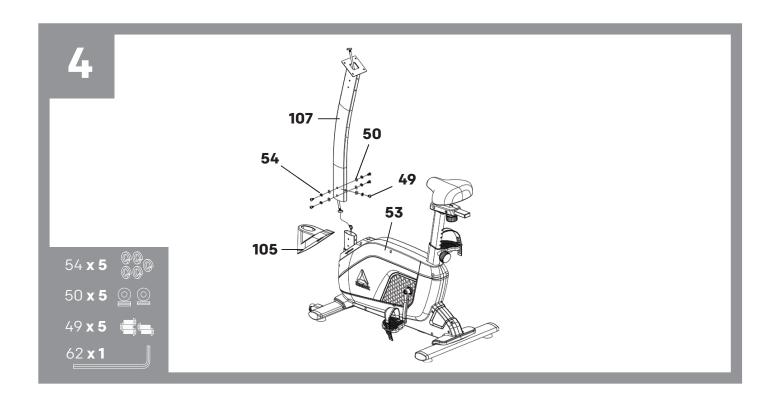




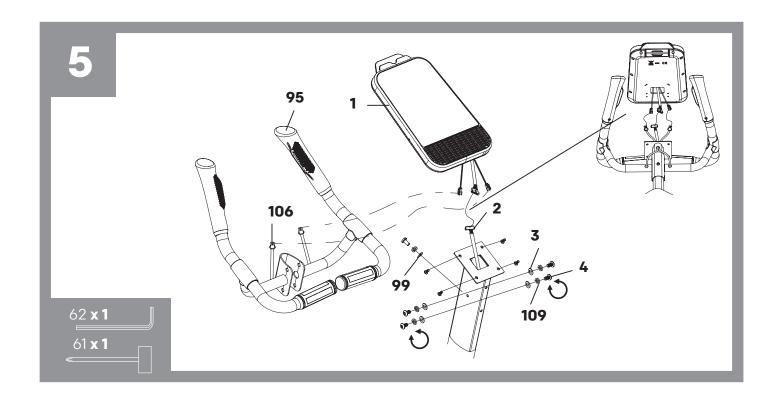


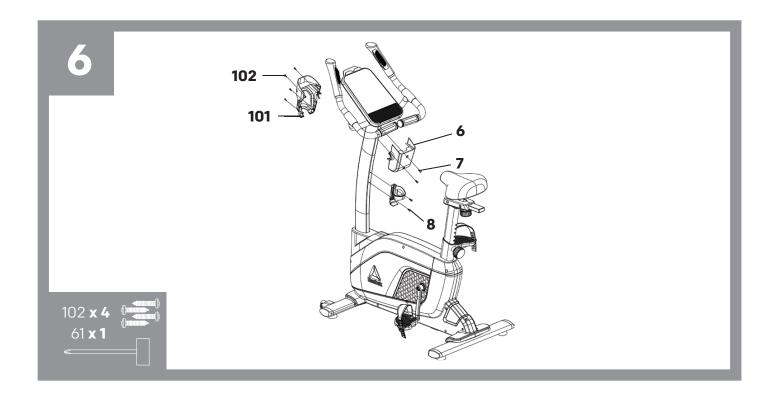

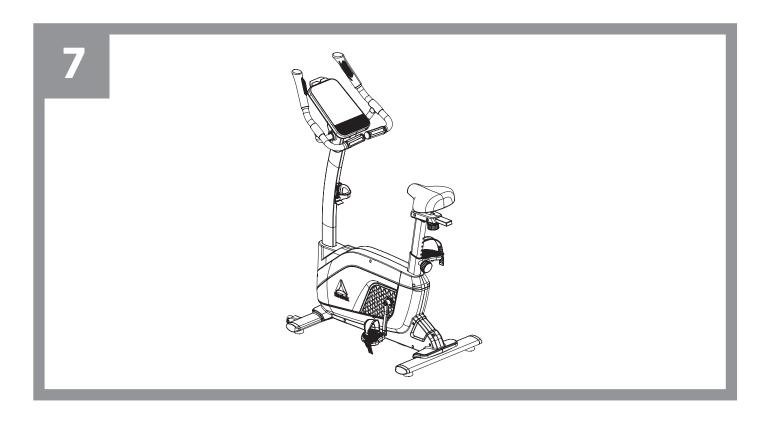


SADDLE HEIGHT ADJUSTMENT MOVING THE BIKE

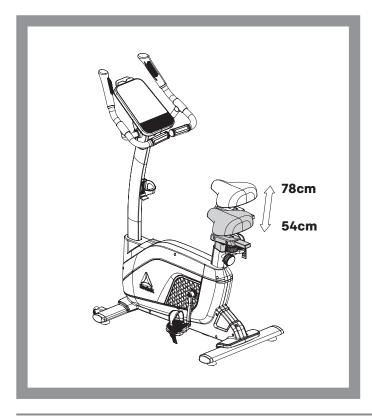

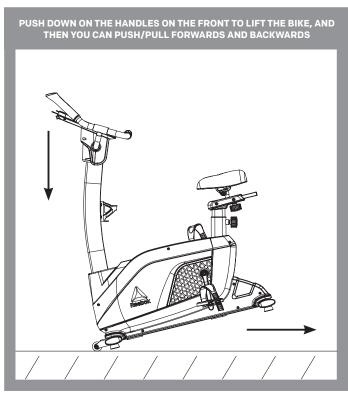





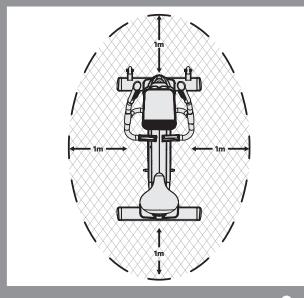

SETUP DIMENSIONS 113.5 (L) x 56 (W) x 146.5 (H)



Serial no. is located on the base of the bike.





Product Registration and Support Enregistrement et support du produit Productregistratie en ondersteuning Registro de productos y soporte Registro de produto e suporte Регистрация и поддержка продукта 製品の登録とサポート

معدلاو جتنملا ليجست

产品注册和技术支持 제품 등록 및 지원



www.reebokfitness.info/product-support



Find out more at: reebokfitness.com/reebok-app Search 'Reebok Fitness Equipment'






WEEE logo this symbol on a product means that the product is covered by European Directive 2012/19/EU.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by RFE International is under license.

Hereby, RFE international declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.





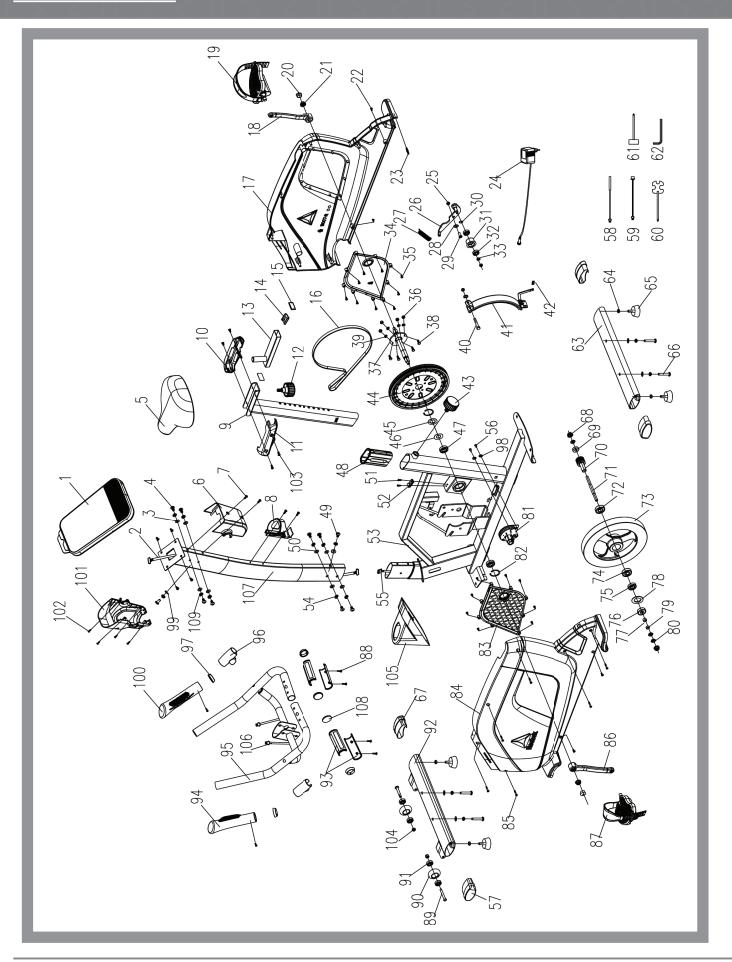



ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
1	Console	1	46	Wave washer	1	85	Screw (ST3.9*50L)	7
2	Upper cable	1		(ø20.5*ø30*0.3T)		86	Crank (L)	1
3	Flat washer	4	47	Bearing (6004 2RS)	2	87	Pedal (L)	1
	(ø8*ø19*2T,BLK)		48	Sleeve	1	88	Screw (ST2.9*20L)	4
4	Screw (M8*P1.25*16L)	4	49	Screw (M8*P1.25*20L)	5	89	Screw (M8*40L*S18L)	2
5	Saddle (3B-21Q+GEL)	1	50	Flat washer	10	90	Transport wheel	2
6	Console tray rear cover	1		(Ø8*Ø19*2T)		91	Bearing (608 2ZZ)	4
7	Screw (M5*16L,BLK)	6	51	Screw (M5*12L,BLK)	2	92	Front foot tube	1
8	Water bottle holder	1	52	Sensor bar fixed seat	1	93	Hand pulse	2
9	Saddle post	1	53	Frame	1	94	Handlebar grip (L)	1
10	Upper slider cover	1	54	Spring washer	9	95	Handlebar	1
11	Lower slider cover	1		(Ø13.5xØ8.5)		96	Handlebar cover	2
12	Knob	1	55	Lowercable	1	97	Hand pulse cover	4
13	Horizontal slider	1	56	Hex screw	2	98	Flat washer	2
14	Slider fixed bolt	1		(M5*P0.8*12L,8)		, 0	(ø5.5*ø12*2T)	_
15	End cap	2	57	Foot tube end cap (L)	2	99	Semicircle washer	1
16	Belt	1	58	Induction wire	1		(Ø8*Ø19*2T)	
17	Chain cover (R)	1	59	DC wire	1	100	Handlebar grip (R)	1
18	Crank (R)	1	60	Wrench with screwdriver	1	101	Console tray front	1
19	Pedal (R)	1		(13.15.17)			cover	
20	Crank cover	2	61	Socket wrench with	1	102	Screw (ST2.9*20L)	4
21	Nut	2	4.0	screwdriver (13.14)	1	103	Screw (M5*10L(Ø9.5)	4
22	Screw	4	62	Allen Key (6*35*150mml)	1	104	Nylon nut (M8*7T)	2
23	Pillar (ø9*91.6L)	1	63	Rear foot tube	1	105	Upright post cover	1
24	Adaptor (9V 1A)	1	64	Hex nut (M10,BLK)	2	106	Hand pulse wire	2
25	Nylon nut (M8*7T,13)	3	65	Rubber pad (M10)	4	107	Upright post	1
26	Idler plate	1	66	Screw (M8*P1.25*60L*S20L)	4	108	End cap	2
27	Idler spring	1	67	Foot tube end cap (R)	2	109	Spring washer	5
27	(ø16*ø2.5(65Mn))		68	Nut	2	.0,	(Ø8.1*2.5T,)	Ü
28	Flat washer	1	69	Bearing (6000)	1			
	(Ø8*Ø22*1T)		70	Small belt pulley	1			
29	Screw (M8*20L)	1	70	(ø34*J8)	ı			
30	Wave washer (ø10.2*ø13*0.3T)	1	71	Flywheel axle (3/8"- 26*130L ,BLK)	1			
31	Idler wheel	1	72	Bearing (6203 2RS)	1			
32	Bearing (6000 2ZZ)	2	73	Flywheel	1			
33	Sleeve (3mm)	1	73	(280*32W*7KG)	I			
34	Chain cover right trim cover	1	74	One-way bearing (ø35*17)	1			
35	Screw (ST2.9*10L)	17	75	Bearing (6003 2RS)	1			
36	Nylon nut (M6*5.5T)	4	76	Bearing (6300 2RS)	1			
37	Crank axle	1	77	Plastic sleeve	1			
38	Hex screw	4	, ,	(ø10*ø15.8*9mm)	'			
	(M6*P1.0*16L)		78	Flat washer	1			
39	Spring washer	4		(ø30*ø34*0.8T)				
	(ø6.1*1.6T)		79	Plastic sleeve	1			
40	Hex screw	1		(ø10*ø15.8*6mm)				
	(M8*55L*S25L)		80	Hex nut (3/8"-26*3.8T)	3			
41	Magnetic system	1	81	Motor	1			
42	Spring	1	82	C shape clasp	2			
43	Pull pin	1		(ø18.5*ø22.5*1T)				
44	Belt pulley (ø260)	1	83	Chain cover left trim	1			
45	Flat washer (ø20.3*ø30*0.5T)	1	84	cover Chain cover (L)	1			

CONNECT YOUR SMARTPHONE TO YOUR NEW REEBOK EQUIPMENT

DOWNLOAD:

Search 'Reebok Fitness Equipment' on the App Store or Google Play.







CONNECT:

Your Reebok machine connects to the app via the bluetooth dongle, so you don't need GPS or internet to use it. The USB connector is colour coded blue to match the correct USB port on your machine.

Once you have selected a workout or planned your route, the app will ask you to choose the machine you would like to connect with.







PLAN YOUR ROUTE

Choose 'MAP MY ROUTE' from the 'GET STARTED' tab.

01. PRESET ROUTES:



There are 5 preset routes, that you can select from by clicking the preset icon.

02. CUSTOMISE YOUR ROUTE:



First, Search for a location where you would like to plan your route.



Create your route by pressing on the map to choose your starting point, finish point, and up to 8 way points.





START YOUR ROUTE



Once you have chosen your route, slide the GO button left and then connect with your Reebok machine.

Once you have connected successfully, press start on your cardio equipment to begin your workout!

INCLINE O

MONITOR WORKOUT DATA

To change the data view, swipe to scroll between workout data, elevation and HR/pace.



To remove the data view from the screen, press the data view button.


TRACK YOUR WORKOUT

The Reebok Fitness app allows you to track your progress via Google Maps.



You can switch the view between map, satellite, flyover and street view.

The treadmill's elevation level will automatically adjust to match your programmed route, or if you are using a bike or cross trainer, the resistance level will automatically adjust accordingly.

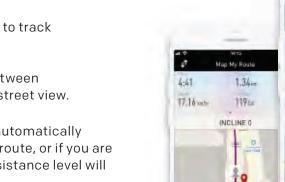



Map My Route

INCLINE O

1.34 in

119ca

4:41

17.16 m/s



ANALYSE YOUR TRAINING

At the end of your training session, the app shows you a workout profile, giving you stats such as distance covered, calories burned and average pace.

You can add personalised notes to your workout profile such as how challenging or hard you found the workout.

The training history page allows you to review your previous workouts and stats such as total number of calories burned.

More languages available at: reebokfitness.com/reebok-app



JAPANESE

ボタン機能

開始ェクササイズを開始または停止する場合に使用します。

回復率 心拍数の回復率をテストするために使用します。

ファン ボタンを押して、ファンをスタート/ストップします。

リセット "随時機能をリセットするために使用します。

[RESET](リセット)を押す前に、[STOP](停止)を押してください。"

入力 設定または選択を確認するために使用されます。

- + 調節機能の値を上げます。
- 調節機能の値を下げます。



操作手順

電源が機械に接続されたら、コンソールのスイッチが入り、ビープ音が鳴ります。画面に KM が表示され、その後、UO モードを入力します。

+/- を押して、ユーザ (U0-U4) を選択し、ENTER (入力)を押します。+/- と ENTER (入力)を使って、ユーザ情報(性別、年齢、身長、体重)を入力します。

+/- を押して、望みのモードを選択し、ENTER (入力)を押します。 +/- を押して、機能の値をセットし、START (スタート)を押して運動を開始します。

すべてのデータをリセットするには、START (スタート)を押してトレーニングを停止し、その後 RESET (リセット)を押し続けます。

モード

マニュアル

+/- ボタンを押して、望みの時間 / 距離 / カロリー / HR (心拍数)をセットし、START (スタート)を押して運動を開始します。+/- を押して、運動中の抵抗を調節します。

プログラム

トレーニング中に機械が自動的に抵抗を調節する、12の予め設定されたプログラムから選択します。

ワット

望みのワット値、20~300 を選択し、START (スタート)ボタンを押して運動を開始します

II1–II4

個人的に調整されたトレーニングのために、ユーザはコンソール上で自分の抵抗プログラムを作成し、保存することができます。



心拍数コントロール

.+/- を押して、55%、75%、90% と TAG の間を選択します。

"TAG は、ユーザーの好みに合わせたトレーニング

のための目標心拍数です。この数値は、エクササイズを開始する前に変更することができます。"

最大心拍数は、「220 一年齢=合計目標心拍数」のように計算します。この数値は、最大心拍数(MHR) を表します。この数値を基に、55%、75%、または90%を割り出します。例: 220 -25(ユーザーの年齢) =195MHR(この数値を基に、お好みの%を割り出します)。

[ENTER]を押して確定します。

トレーニング中、抵抗は自動的に変更されます。

回復率

RECOVERY (回復)を押し、その後、両手を脈拍センサの上に置きます。コンソールは1分からカウントダウンし、HR (心拍)シンボルがフラッシュします。コンソールはその後、HR (心拍)回復レベルを表示します:

F1 - 非常に良い

F2 - とても良い

F3 - 良い

F4 - 普通

F5 - 平均以下

F6 - 悪い

MP3

装置のプラグに MP3 ケーブルを差し込み、コンソールを通して音楽を再生します。

注意

このコンピュータの電源は9V電源アダプターです。 マシンに他のアダプターを使用しないでください。


節電

この製品は、ERP 指令に適合するように製造されております。装備されている節電機能モードによって、トレッドミルが 4 分間使用されないと、このモードが有効になります。トレッドミルの使用を再開するには、安全キーを取り外して、もう一度付けてください。



LOCATION

Located on the bottom of the main frame

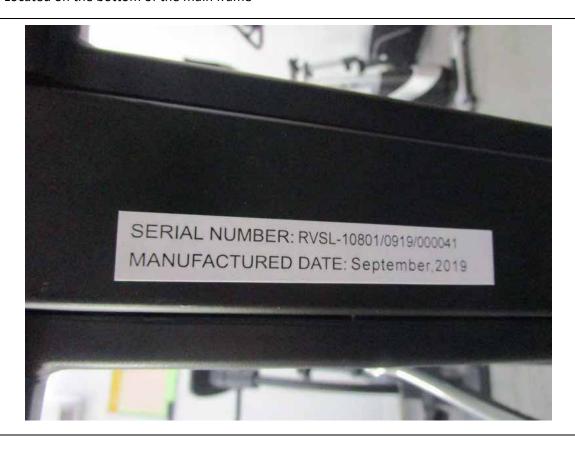



UK: RFE Europa Ltd. 8 Clarendon Drive, Wymbush, Milton Keynes, MK8 8ED. +44 (0)800 440 2459 / techsupport@rfeinternational.com

Europe: RFE Europa, Linprunstrasse 49, 80335 Munich, Deutschland. serviceeuropa@rfeinternational.com

ES: +34 800 600 816 / serviciotecnico@rfeinternational.com **DE**: +49 (0)89 189 39 700 / serviceeuropa@rfeinternational.com

APAC (excluding Australia): RFE Asia Pacific, 26F, 2608-2609, 1 Hung To Road, Kwun Tong, Kowloon, Hong Kong.

+852 34685027 / techsupportapac@rfeinternational.com **Australia**: techsupportaustralia@rfeinternational.com

China: 中国: 上海锐达健身科技发展有限公司 上海市宝山区爱辉路201号 智航创新园 1座 1601 A室. 4007037798 / techsupportchina@rfeinternational.com

USA: RFE Sporting Goods Inc. 445 Plasamour Drive, Suite 1, Atlanta, GA 30324, USA. +1 (800) 215 6216 / techsupportusa@rfeinternational.com

P.15